

Tools required:
 Phillips Drive Screwdriver

Parts Included:
 (1) Adjustable VESA Bar Code Holder

1 To Install Adjstable VESA Bar Code Holder
 (BCH-14):

Remove Monitor from LCD Monitor Support
 (FSA-5).

Insert the top (2) Long Phillips
 Drive Flat Head Machine Screws
 (16mm) into monitor.

Rest VESA Plate on the back
 of the Monitor. Slide the Adjustable
 VESA Bar Code holder up and into
 position (so top slots of bracket are lined
 up with screws).

While holding the Adjustable VESA Bar Code
 holde in place, insert and tighten the bottom
 (2) Long Phillips Drive Flat Head
 Machine Screws.

Tighten top (2) Screws.

The width of the barcode holder can be adjusted
 by loosening two screws on the arm of
 the barcode holder. Once desired width is
 achieved, tighten (2) screws.

The adjustable barcode holder is non-handed.
 Simply change the orientation of the "fork" for
 left, right and even top mounting.

NOTE: The offset of the VESA Bar Coder Holder
 allows for different mounting depths of a monitor.

