

Tools Required:
Phillips Head Screwdriver

Parts Included:
1x AS-4334 with Hardware
1x AS-4274 Ram – Side Clamp (Accessory)
1x AS-4295 USB Secure Storage (Accessory)

1. Before beginning, locate the hardware pack labeled 021-8015, shown in **Figure 1**.
2. Next, locate the bottom clamp, the top clamp, and the main plate as shown in Figure 2.
3. Slide the top clamp and bottom clamp into the main plate and over the pins (facing downwards) as shown in Figure 3.



Figure 1. Hardware Pack

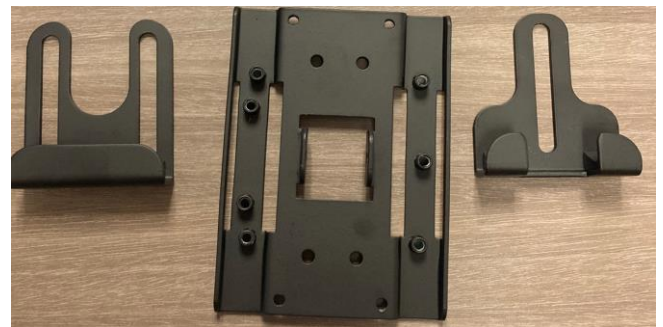


Figure 2. Top Clamp, Bottom Clamp, and Main Plate



- Next, locate three $\frac{1}{4}$ " plastic spacers (shown in Figure 4) and three M5 washers (shown in Figure 5).

Figure 3. Top/Bottom Clamp Fit on Main Plate



Figure 4. $\frac{1}{4}$ " Plastic Spacers



Figure 5. M5 Washers

5. Place the three ¼" plastic spacers on top of the three pins that the top and bottom plate slid into (in step 3 and shown in Figure 3.) as shown in Figure 6 for reference. The three M5 washers will be placed on top of the three spacers.
6. Next, locate three smaller M5 x 8 mm screws (shown in Figure 7), and fasten them to the pins of the main plate (shown in Figure 8).
NOTE: Do not completely tighten these screws. These screws will be tightened once your tablet is fastened in place inside of the tablet clamp.

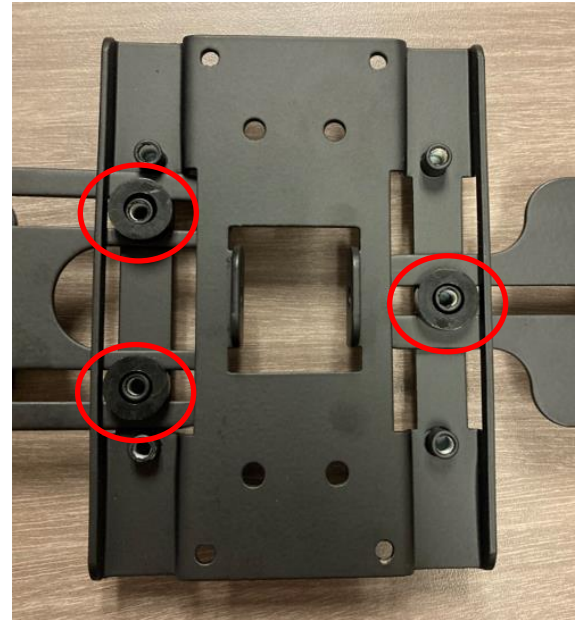


Figure 6. Attached ¼" spacers to pins.



Figure 7. M5 x 8 mm screws



7. Obtain the two side clamps and secure them to the back of the main plate (Shown in Figure 9.)
8. Using the same M5 washers (shown in Figure 5.) and the same M5 x 8 mm screws (shown in Figure 7), secure the side plates to the main plate, shown in Figure 10. **NOTE: Do not completely tighten these screws. These screws will be tightened once your tablet is fastened in place inside of the tablet clamp.**

Figure 8. M5 x 8 mm screws fastened

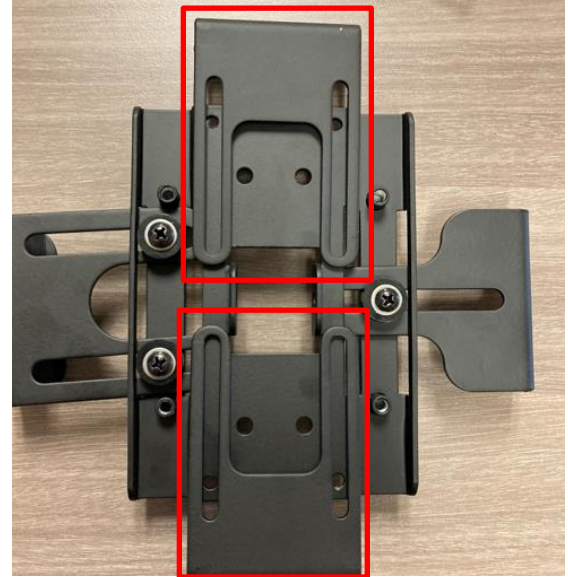


Figure 9. Side Clamps on Main Plate

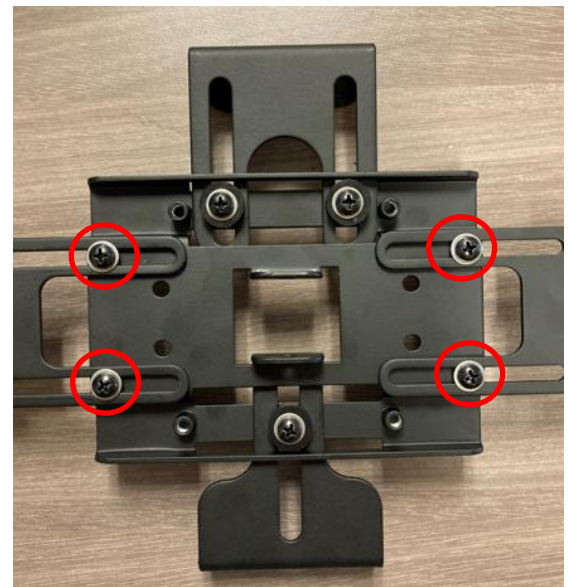


Figure 10. Side Clamps secured to Main Plate

9. Obtain the four adhesive rectangle padding (Shown in Figure 11).
10. Next, turn the tablet clamp over 180 degrees in order to place the four adhesive rectangle padding where your tablet will be placed. Use Figure 12 for reference.
11. Place your tablet inside of the clamp, securing the top, bottom, and side clamps to the edge of the tablet as you see fit. Once the clamps are placed in your appropriate setting, tighten the seven M5 x 8 mm screws on the back of the clamp.

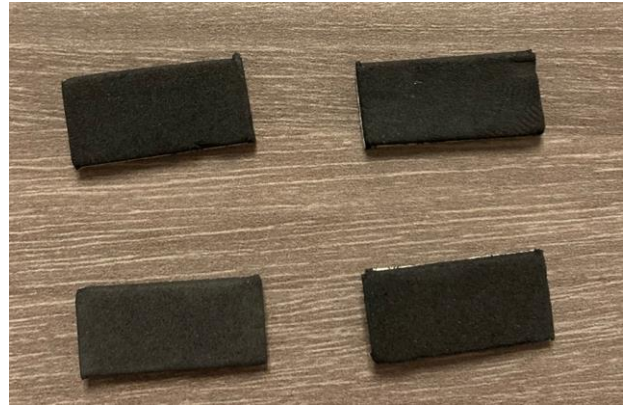


Figure 11. Adhesive Rectangle Padding

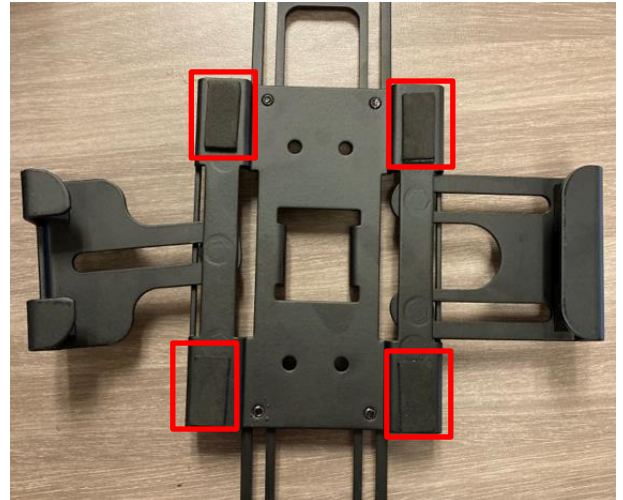


Figure 12. Adhesive Rectangle Padding Placement

12. Obtain the 4x ½" spacer (Figure 13) and the 4x M5 x 20mm screws (Figure 14).
13. On the back of the tablet clamp, place the remaining two plastic covers over the two pins with the aforementioned ½" spacers, as shown in Figure 15.



Figure 13. ½" Spacers



Figure 14. M5 x 20mm Screws



Figure 15. Plastic Covers attached to Clamp

14. Next, beginning by screwing in the top M5 x 20mm screw with, place the tablet clamp onto the vesa mount of the FSC-10 you have received. An example of this can be seen in Figure 16.
15. Once the top screws have been screwed in and the tablet is secure, screw in the remaining two bottom screws with the M5 x 20 mm screws (Figure 17).



Figure 16. Top Vesa Mount Screws



Figure 17. Bottom Vesa Mount Screws

16. An example of the fully assembled clamp (without a tablet) can be found in Figure 18.



Figure 18. Fully Assembled AS-4334 on FSC-10

AS-4295 USB Lock Assembly

1. If installing a USB Secure Storage, an additional AS-4295 Storage bracket and custom AS-4274 side clamp should have been sent with the AS-4334 Tablet Clamp. An example of these two pieces can be found in Figure 19.
2. These will be fastened together using two 8-32 x 1/4 screws. An example of the put together USB bracket can be seen in Figure 20.
3. Once you have assembled the bracket, this will be used in place of a side bracket of your choosing, shown in Steps 7 and 8 as well as in Figures 9 and 10.



Figure 19. AS-4295 USB Lock Brackets



Figure 20. Assembled AS-4295 and AS-4274 USB Secure

If you have any questions, contact Altus at service@altus-inc.com or (616) 233-9530. If immediate assistance is needed, please call as soon as possible so we may help.